

# WIND ALARM

## ALARM LATCHING INSTRUCTIONS


This Wind Alarm has been outfitted with an optional latching switch on Set Point number two.

Pins 10 and 11 are the relay's control terminals, they are normally closed.

When the wind reaches the level set on Set Point #2 the red light will be activated, and the switch will open to turn off the load connected to the control terminals 10 and 11.

The relay contacts will remain open until the reset switch located on the bottom of the case is pressed.

**Note:** Set point 1 will operate as stated in the wind alarm instructions; the relay will continue to toggle normally as the wind speed varies around that set point.

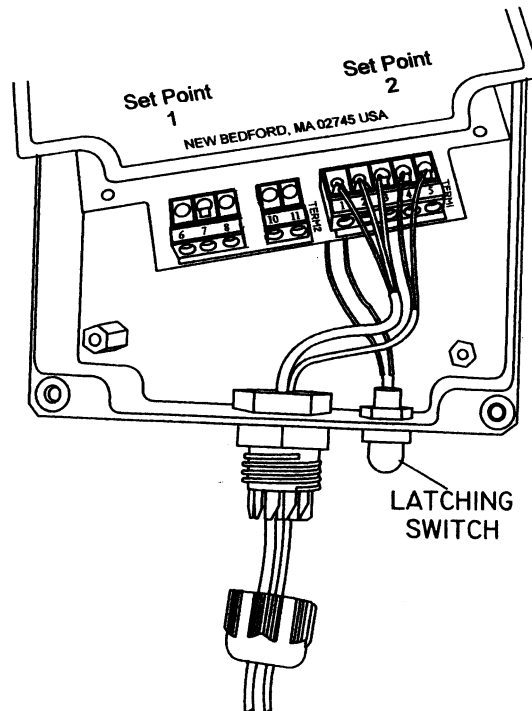

**MAXIMUM** INC.

30 Samuel Barnet Boulevard  
New Bedford, MA 02745

(508) 995-2200, [www.maximum-inc.com](http://www.maximum-inc.com)